Whirlpool® 30" (76 cm) Freestanding Electric Range

PRODUCT MODEL NUMBERS

GGE388LX GGE390LX

Electrical Connection:

- This range is manufactured with the neutral terminal connected to the cabinet. Use a 3-wire, UL listed, 40- or 50-amp power supply cord (pigtail) (see the following Range Rating chart). If local codes do not permit ground through the neutral, use a 4-wire power supply cord rated at 250 volts, 40 or 50 amps and investigated for use with ranges.

Range Rating*		Specified Rating of Power Supply Cord Kit and Circuit Protection
120/240 Volts	**120/208 Volts**	**Amps**
8.8 - 16.5 KW	7.8 - 12.5 KW	40 or 50**
16.6 - 22.5 KW	12.6 - 18.5 KW	50

* The NEC calculated load is less than the total connected load listed on the model/serial rating plate.

** If connecting to a 50-amp circuit, use a 50-amp rated cord with kit. For 50-amp rated cord kits, use kits that specify use with a nominal 1⅜" (34.9 mm) diameter connection opening.

- A circuit breaker is recommended.
- The range can be connected directly to the circuit breaker box (or fused disconnect) through flexible or nonmetallic sheathed, copper or aluminum cable. See the "Electrical Connection - U.S.A Only" section.

CABINET OPENING DIMENSIONS

Cabinet opening dimensions shown are for:

25" (63.5 cm) countertop depth,
24" (61 cm) base cabinet depth,
36" (91.4 cm) countertop height

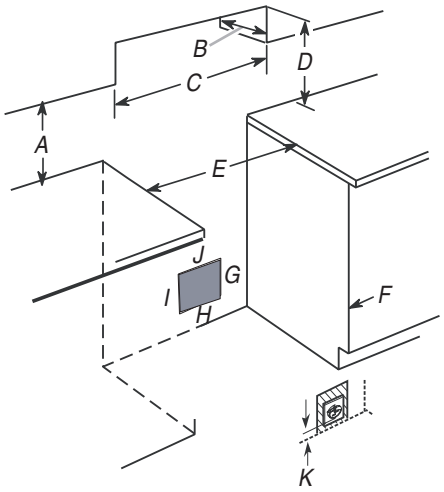

A. 18" (45.7 cm) upper cabinet to countertop
B. 13" (33.0 cm) upper cabinet depth
C. 30" (76.2 cm) min. opening width.
D. For minimum clearance to the top of the cooktop, see NOTE.
E. 30" (76.2 cm) min. opening width
*F. Cabinet door or hinge should not extend into cutout**
G. 1½" (3.8 cm) min. from right side cabinet
H. 2" (5.1 cm) min. from floor
I. 7" (17.8 cm) min. from floor
J. 8" (20.3 cm) width
K. 3½" (8.91 cm) min. from floor

Proper positioning of outlet shown above.

**Nothing located in shaded areas can extend more than 1½" (3.8 cm) from wall or range will not slide all the way back.*

NOTE: 24" (61.0 cm) minimum when bottom of wood or metal cabinet is covered by not less than ¼" (0.64 cm) flame retardant millboard covered with not less than No. 28 MSG sheet steel, 0.015" (0.4 mm) stainless steel, 0.024" (0.6 mm) aluminum or 0.020" (0.5 mm) copper.

30" (76.2 cm) minimum clearance between the top of the cooking platform and the bottom of an uncovered wood or metal cabinet.

PRODUCT DIMENSIONS

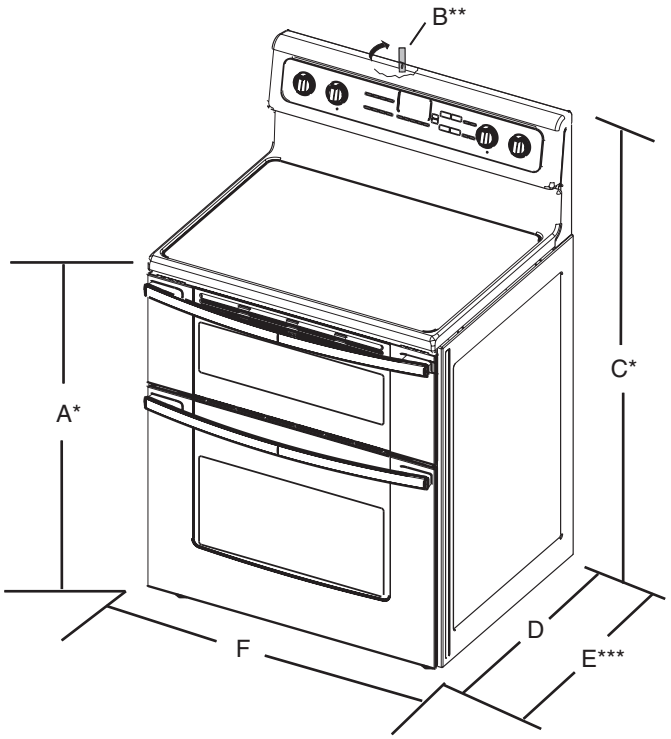

*A. 35¾" ± ⅛" (90.8 cm ± 0.3 cm) cooktop height (minimum) with leveling legs screwed all the way in**
*B. Model/serial/rating plates (located behind the control panel)***
*C. 47⅛" ± ⅛" (119.7 cm ± 0.3 cm) overall height (minimum) with leveling legs screwed all the way in**
D. 28½" ± ¼" (72.4 cm ± 0.6 cm) depth with handle
*E. 26⅛" ± ⅛" (66.4 cm ± 0.3 cm)****
F. 29 15/16" ± 1/16" (76.0 cm ± 0.2 cm) width

*Range can be raised approximately 1" (2.5 cm) by adjusting the leveling legs.

**Model/serial/rating plates may be rotated up from behind the control panel for viewing from the front of the range.

***Excludes handle. Dimension given is from wall to front of oven door and will vary based on electric outlet receptacle installation.

Because Whirlpool Corporation policy includes a continuous commitment to improve our products, we reserve the right to change materials and specifications without notice.

Dimensions are for planning purposes only. For complete details, see Installation Instructions packed with product. Specifications subject to change without notice.

Ref. W10289536A
8/18/10